



Item	Part No.	Designation
1	151 307.0000	Strike knob
2	222 036.0000	Safety device, yellow
3	151 310.0000	Handle
4	151 301.0000	Spring pin
5	356 711.0000	Piercer (incl. o-ring(s))
6	149 466.0000	Spring
7	359 992.0000	Gas cartridge 60g for 6 l (nonrefillable)
	359 741.0000	Gas cartridge 120g for 9 l (nonrefillable)
	130 090.0000	O-ring for gas cartridge
8	149 422.0000	Sieve for dip tube
9	151 292.0000	Dip tube 6 l
	151 293.0000	Dip tube 9 l
10	359 993.0000	Cartouche with Imprex C 120ml for 6 l
	359 994.0000	Cartouche with Imprex C 180ml for 9 l
11	151 308.0000	Release pin
12	151 372.0000	Connection tube for cartouche 6 l
	151 609.0000	Connection tube for cartouche 9 l
13	201 270.0000	O-ring 60 x 4 NBR 70 Shore
14	151 263.0000	Locking collar, black aluminum
15	148 944.0000	Safety clip, yellow
16	359 990.0000	Valve assembly for 6 l with gas cartridge, dip tube, agent cartouche



**WKL 6/9 PRO  
EN 3 / CE**

No.: 930482-01  
Replacement for: 930482-00  
Date: 14.05.2021

	359 991.0000	Valve assembly for 9L with gas cartridge, dip tube, agent cartouche
17	221 827.0000	Burst disc
18	359 995.0000	Hose assembly with pistol (mist nozzle)
<b>Item</b>	<b>Part No.</b>	<b>Designation</b>
	149 153.0000	O-ring thread hose line
19	----	Cylinder
20	211 370.0000	Skirt 6 l
	211 380.0000	Skirt 9 l
	300 150.0000	Wall bracket
	071 056.0000	Adhesive tape 9 mm x 50 m
	204 490.0000	Service seal
	925 016.0000	Water disinfection tablets, 100 pieces
21	930489.0000	Washer, 10 pieces

**Check the valve fitting (with the gas cartridge unscrewed):**

Pull out the safety device and press the strike knob, remove the spring and the piercer.

Check the piercer and o-ring for damage. If necessary, replace the piercer completely. Secure and seal the valve fitting. Grease the piercer on the shaft and reinsert it with the spring. Before installing the gas cartridge, check if the spring is correctly positioned.

**Note:** If the hose assembly complete with pistol was detached from the valve body, please check presence of the burst disc inside valve body and the washer inside the hose connector.



**Strike knob:** The strike knob must be checked for function. If it is damaged, the spring pin on the handle of the valve must be loosened in order to be able to remove and replace the release pin and strike knob. The strike knob is screwed onto the release pin.

**Gas cartridge:**

The gas cartridge must be weighed and checked for visual defects.  
(see also point 5 of general part).

If there are signs of corrosion or discoloration of the membrane disc, the gas cartridge must be replaced.

**Tightening torques:**

Hose assembly:	12 Nm ± 1 Nm
Locking collar:	60 Nm ± 5 Nm
CO <sub>2</sub> cartridge in valve fitting:	10 Nm - 2 Nm
Agent cartridge on adapter:	5 Nm ± 1 Nm
Adapter on connecting tube:	5 Nm ± 1 Nm

**PLEASE NOTE**

The maintenance instructions consist of the foreword, general maintenance described in section 1-5 of instructions and the instructions for the device on request. A single consideration or separation of these is not possible!